PHOTO E 7.1-1
POWER AND COMMUNICATIONS FEEDER PATH
BEHIND CABINET 1



PHOTO E 7.1-2A POWER AND COMMUNICATIONS FEEDER CROSSING THE EXISTING TRAIL

EXISTING UPS AND BATTERIES IN THIS ENCLOSURE. SEE SHEET G3.0 FOR WORK IN THIS CABINET.



CROSSING THE EXISTING TRAIL

ADD 100 AMP 2 POLE BREAKER TO

NEW CABINET #2.

EXISTING PANEL 'A' TO SUPPLY NEW 100 AMP FEEDER FROM CABINET #1 TO

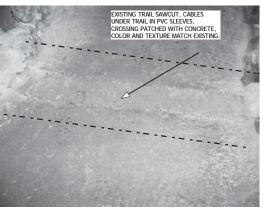


PHOTO E 7.1-3

POWER AND COMMUNICATIONS FEEDER.

CROSSING THE EXISTING TRAIL BETWEEN STAIR 45 AND STAIR 49

MAIN FEEDER CABLES, LEAKY FEEDER CABLE, BRANCH CIRCUITS, AND SWITCH CIRCUITS LOOSE LAID ON CAVE FLOOR

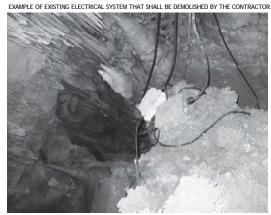
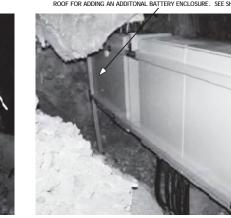


PHOTO E 7.1-4
POWER AND COMMUNICATIONS FEEDER
EXITING THE PARADISE ROOM

AFTER CROSSING THE TRAIL, FURNISH AND INSTALL THE NEW POWER FEEDER ADJACENT TO THE EXISTING COMMUNICATION FEEDER ON THE SURFACE OF THE CAVE FLOOR IN A CREVICE UNTIL THEY JOIN THE EXISTING OLD POWER FEEDER HERE AND THENCE FOLLOW AN ACCESSIBLE TUNNEL (WHICH IS SOME DISTANCE FROM THE MAIN TRAIL).



PHOTO E 7.1-5E
UNISTRUT MOUNTING OF CABINET 1



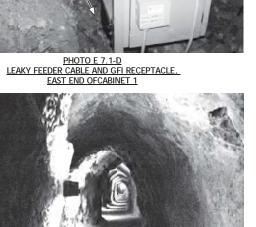


PHOTO E 7.1-6D EXIT TUNNEL INSTALLED LIGHTING - GENERAL VIEWS

SAME FORMATION



PHOTO E 7.1-6E EXIT TUNNEL LOCATION - GENERAL VIEWS


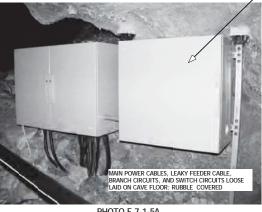


PHOTO E 7.1-5A CABINET 1

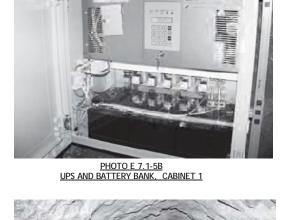

THIS UPS IS TO BE MOVED TO CABINET 3. SEE SHEET G3.0.

POWER CABLES AND LEAKY FEEDER COMMUNICATIONS CABLE CONTINUE ON THE SURFACE OF THE CAVE FLOOR, CONCEALED BY RUBBLE.

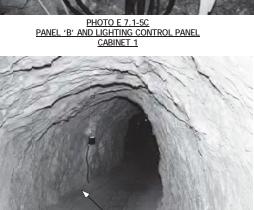




PHOTO E 7.1-6C EXIT TUNNEL INSTALLED LIGHTING - GENERAL VIEWS

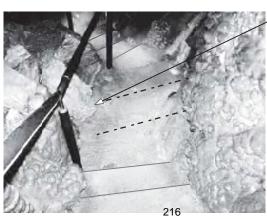


PHOTO E 7.1-8A SAWCUT TRAIL CROSSING BETWEEN STAIR 45 AND 46



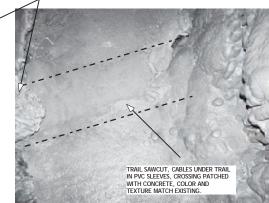


PHOTO E 7.1-8B SAWCUT TRAIL CROSSING BETWEEN STAIR 45 AND 46

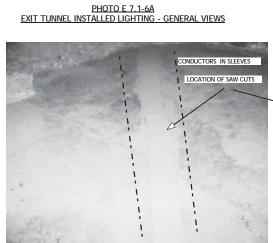

CABLES UNDER CONCRETE

PHOTO E 7.1-7A
AREA OF FLOOR VICINITY TOP OF STAIR 49
SAWCUTS PATCHED TO MATCH

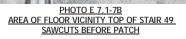

CABLES UNDER CONCRETE


PHOTO E 7.1-6B EXIT TUNNEL INSTALLED LIGHTING - GENERAL VIEWS



Lewis & Clark Caverns State Park
Railing and Lighting Upgrades 2018
Stortang Fish,
FWP #7176603

check by MTF drawn MKE issue log 03/23/18 For bidding

E 7.1

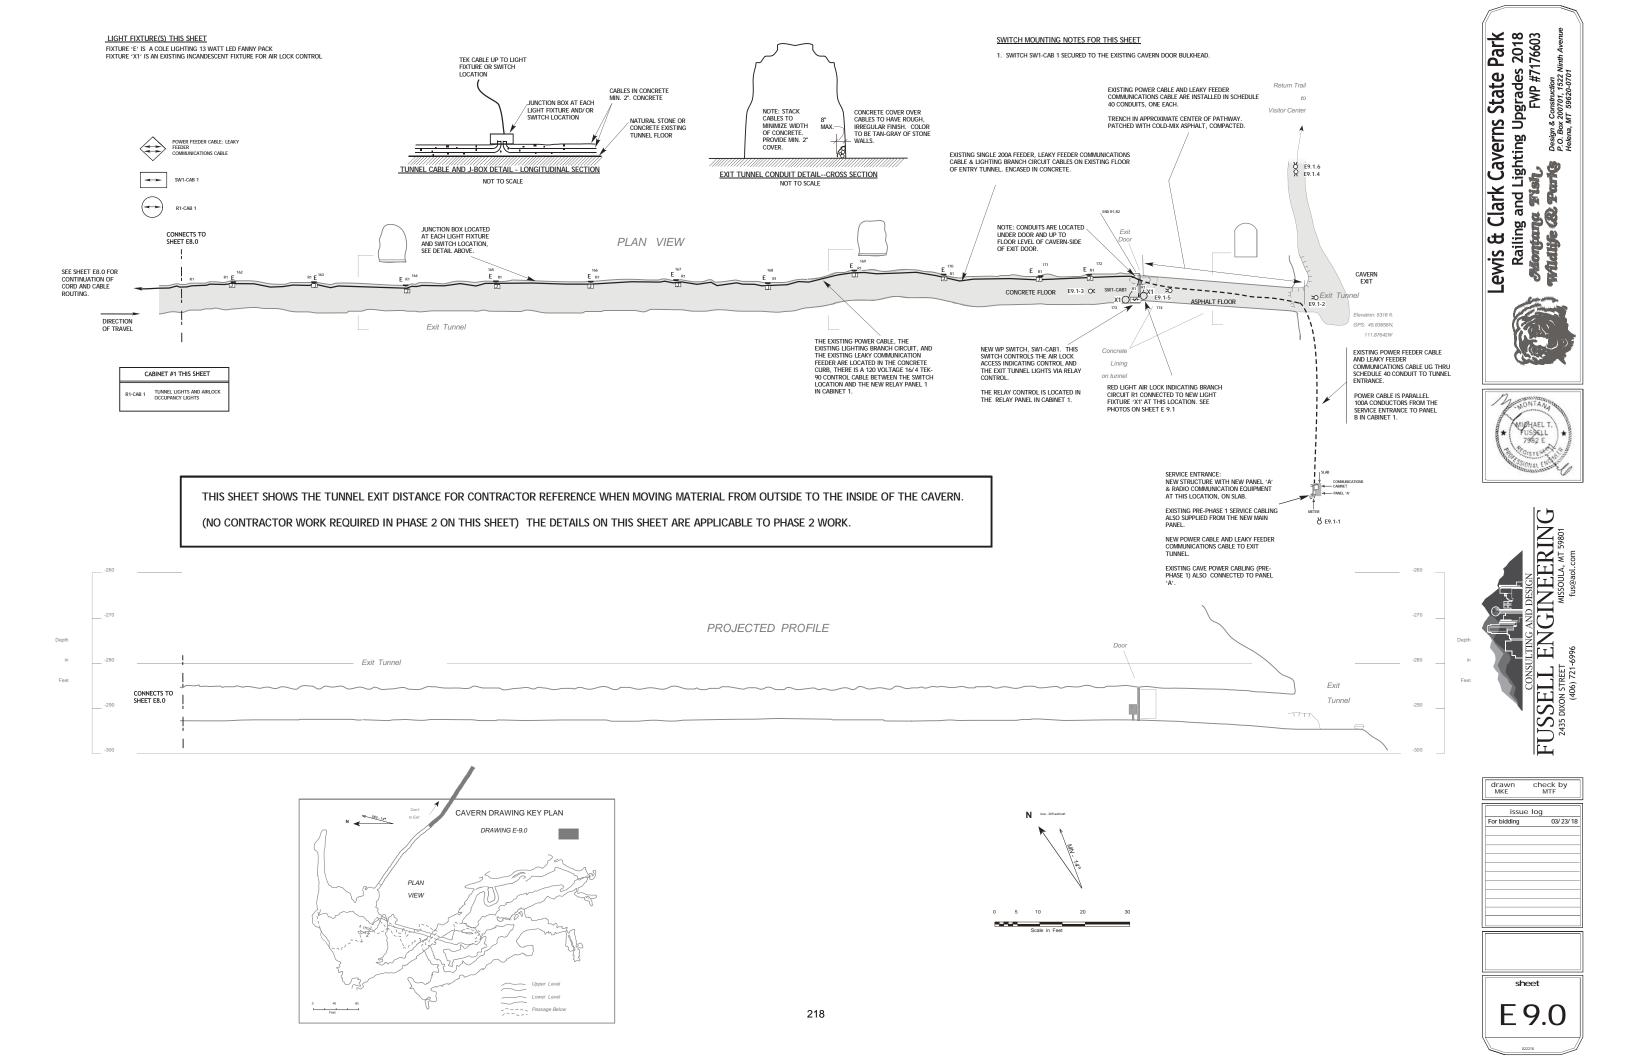


<u>PHOTO E 9.1-1</u> SERVICE ENTRANCE STRUCTURE

PHOTO E 9.1-5 EXISTING OUTSIDE AIR LOCK WARNING LIGHT

ROUTE OF CABLING UNDER THE FLOOR (POWER CABLE AND LEAKY FEEDER CABLE), FROM CORNER OF THE DOOR INTO CENTER OF PATHWAY.

THE CONTRACTOR FURNISHED AND INSTALLED THE NEW CAVERN POWER FEEDER RATED 200 AMPS AMPACITY (FOR VOLTAGE DROP) AND THE NEW LEAKY FEEDER COMMUNICATIONS CONDUCTOR UNDER THE FLOOR IN SCHEDULE 40 PVC CONDUIT.

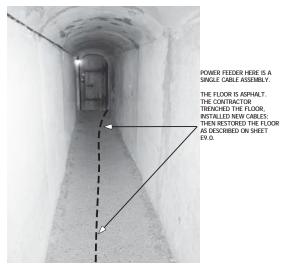

THE FLOOR IS ASPHALT. THE CONTRACTOR
TRENCHED THE FLOOR.

<u>PHOTO E 9.1-2A</u> <u>EXIT TUNNEL AT EXIT (OUTSIDE)</u>



PHOTO E 9.1-2B EXIT TUNNEL AT EXIT (LOOKING IN)



PHOTO E 9.1-2C EXIT TUNNEL AT EXIT (LOOKING OUT)


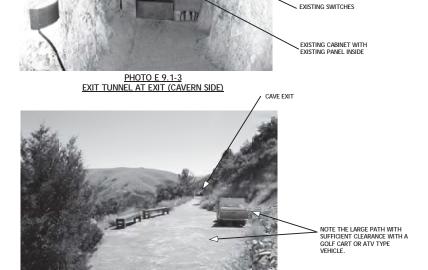


PHOTO E 9.1-4 CAVE EXIT



PHOTOS E 9.1-7
TWO VIEWS OF POTENTIAL STORAGE AREA AT CAVERN ENTRANCE FOR PHASE 2 WORK



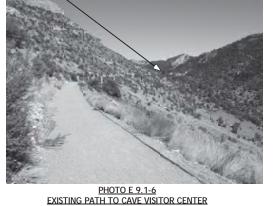


VISITOR'S CENTER





NOTE A COUPLE OF SWITCH BACKS JUST ABOVE CAVE VISITOR CENTER



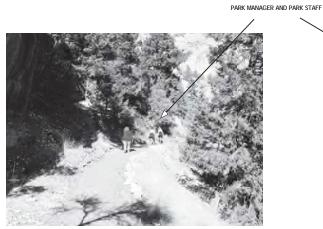

NOTE PAVED TRAIL WITH MODERATE GRADES

PHOTOS E 9.1-8A TWO VIEWS OF THE UPPER TRAIL WHICH CAN BE USED FOR PHASE 2 WORK.



219

**PHOTOS E 9.1-8B** TWO VIEWS OF THE UPPER TRAIL WHICH CAN BE USED FOR PHASE 2 WORK.



Lewis & Clark Caverns State Park
Railing and Lighting Upgrades 2018
Stortage Fish
Thatise & Parks Design & Construction
Photograph Proc. Box 200701, 1522 Ninth Avenue

Lewis & Clark


NEW LIGHT FIXTURE, REUSING THE EXISTING JUNCTION BOX AND WALL PENETRATION TO CONNECT TO THE EXISTING WARNING LIGHT ON THE

OUTSIDE SURFACE OF THIS WALL, DIRECTLY OPPOSITE. (SEE PHOTO E-9.1-5, THIS SHEET.)

drawn MKE check by issue log

03/23/18


E 9.1

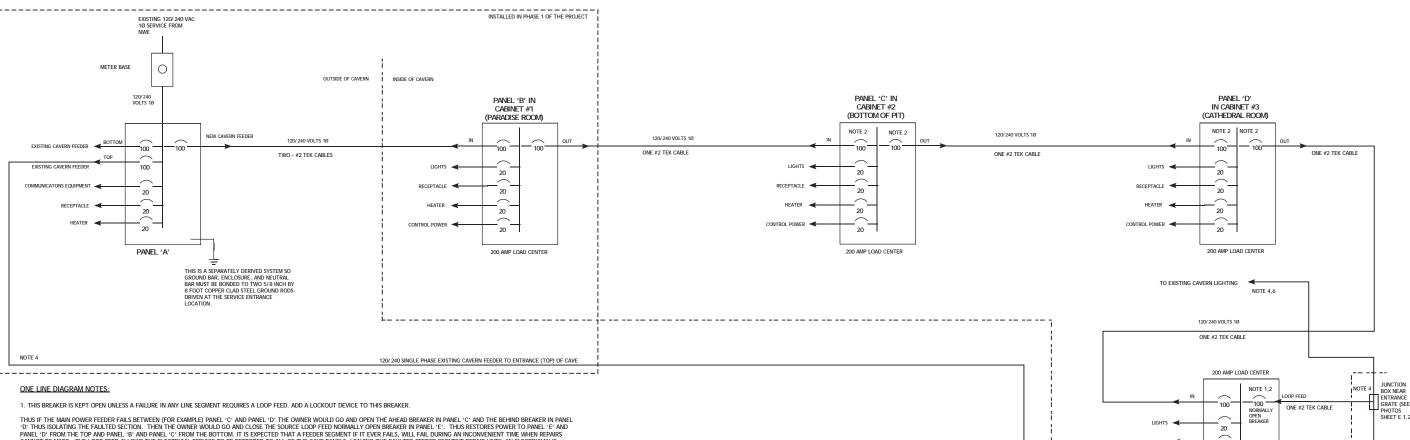

THUS IF THE MAIN POWER FEEDER FAILS BETWEEN (FOR EXAMPLE) PANEL 'C' AND PANEL 'D' THE OWNER WOULD GO AND OPEN THE AHEAD BREAKER IN PANEL 'C' AND THE BEHIND BREAKER IN PANEL 'P' THUS ISOLATING THE FAULTED SECTION. THEN THE OWNER WOULD GO AND CLOSE THE SOURCE LOOP FEED NORMALLY OPEN BREAKER IN PANEL 'E'. THUS RESTORES POWER TO PANEL 'E' AND PANEL 'B'. FROM THE BOT AND PANEL 'B'. FROM THE BOT AND PANEL 'B'. FROM THE BOT AND THE SEGMENT IF IT EVER FAILS, WILL FAIL DURING AN INCONVENIENT TIME WHEN REPAIRS CANNOT BE MADE. THE LOOP FEED ALLOWS THE ELECTRICAL SERVICE TO BE RESTORED TO ALL OF THE CAVE PANELS, LEAVING THE FAULTED FEEDER SEGMENT REPAIR UNTIL AN ELECTRICAL SERVICE TO BE RESTORED TO ALL OF THE CAVE PANELS, LEAVING THE FAULTED FEEDER SEGMENT REPAIR UNTIL AN ELECTRICAL SERVICE TO BE RESTORED TO ALL OF THE CAVE PANELS, LEAVING THE FAULTED FEEDER SEGMENT REPAIR UNTIL AN ELECTRICAL SERVICE TO BE RESTORED TO ALL OF THE CAVE PANELS, LEAVING THE FAULTED FEEDER SEGMENT REPAIR UNTIL AN ELECTRICAL SERVICE TO BE RESTORED TO ALL OF THE CAVE PANELS, LEAVING THE FAULTED FEEDER SEGMENT REPAIR UNTIL AN ELECTRICAL SERVICE TO BE RESTORED TO ALL OF THE CAVE PANELS, LEAVING THE FAULTED FEEDER SEGMENT REPAIR UNTIL AN ELECTRICAL SERVICE TO BE RESTORED TO ALL OF THE CAVE PANELS, LEAVING THE FAULTED FEEDER SEGMENT REPAIR UNTIL AN ELECTRICAL SERVICE TO BE RESTORED TO ALL OF THE CAVE PANELS, LEAVING THE FAULTED FEEDER SEGMENT REPAIR UNTIL AN ELECTRICAL SERVICE TO BE RESTORED TO ALL OF THE CAVE PANELS, LEAVING THE FAULTED FEEDER SEGMENT REPAIR UNTIL AN ELECTRICAL SERVICE TO BE RESTORED TO ALL OF THE CAVE PANELS, LEAVING THE FAULTED FEEDER SEGMENT REPAIR UNTIL AN ELECTRICAL SERVICE TO BE RESTORED TO ALL OF THE CAVE PANELS, LEAVING THE FAULTED FEEDER SEGMENT BE ALL OF THE CAVE PANELS, LEAVING THE FAULTED FEEDER SEGMENT BE ALL OF THE CAVE PANELS.

- 2. THESE BREAKERS ARE NORMALLY CLOSED UNLESS A LOOP FEED IS REQUIRED REQUIRING AN OPEN PAIR BREAKERS TO ISOLATE A SECTION.
- 3. ALL PANELS ARE RATED 200 AMPS SO THAT IF ONE FORGETS AND LEAVES THE LOOP FEED CONNECTED THE AVAILABLE OVERCURRENT OF 100/100 AMPS FROM EACH DIRECTION CANNOT DAMAGE THE PANELS.
- 4. SAFETY OFF THE FEEDER FROM THE JUNCTION BOX AT THE ENTRANCE TO THE EXISTING PANELS . THE EXISTING UPPER LOOP SUPPLY CABLE ENDS AT THE JUNCTION BOX. THE NEW #2 TEX CABLE CONNECTS THE EXISTING UPPER LOOP FEEDER CABLE TO THE NEW PANEL 'E'.
- 5. SAFETY OFF THE EXISTING LOWER LOOP FEED IN PANEL 'A'. TAG THE CONDUCTOR INDICATING THAT THE EXISTING LOWER LOOP FEEDER CABLE IS NOT USED.
- 6. THE EXISTING UPPER FEEDER CABLE SERVING THE ORIGINAL PANELS FROM THE UPPER JUNCTION IS TO BE ABANDONED IN PLACE. THE EXISTING FEEDER SUPPLY TO THE EXISTING PANELS BEING DEMOLISHED SHALL BE SAFETY OFF AND TAGGED WITH ITS ORIGINAL SOURCE SUPPLY. THE EXISTING FEEDER CABLE SHALL BE CAREFULLY HIDDEN FROM VIEW.

## **CAVERN ONE LINE DIAGRAM**

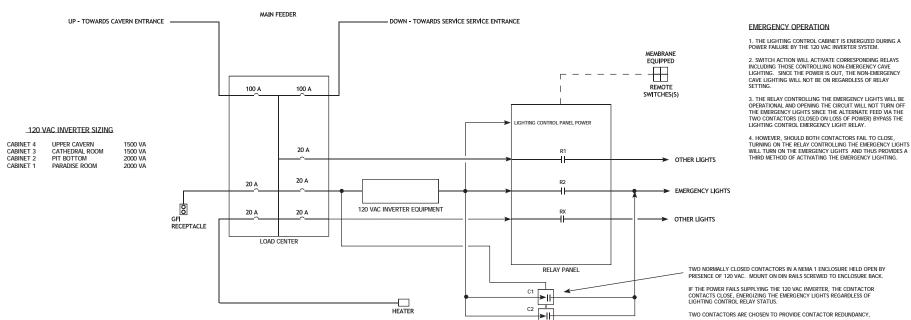



# CABINET, TYPICAL CABINET 1-4

HEATER

PANEL 'F' IN CABINET #4 (CAVERN ENTRANCE)

120/240 SINGLE PHASE EXISTING CAVERN FEEDER TO ENTRANCE (TOP) OF CAVE

SCALE: 1 INCH = 1 FOOT AT ARCHITECTURAL D SIZE

ig and Lighting Upgrades 2018

To Fish.

R. Fush.

FWP #7176603 Clark Railing H Lewis





	drawn MKE	check by MTF
Ī		I
	issue	
	For bidding	03/23/18
	-	
- 1		
ĺ	she	not.
	SIR	æι

E 10.0

## PANEL 'A' (MAIN SERVICE, OUTSIDE)

MAIN: 200 AMP MAIN BREAKER BUS: 200 AMPS MINIMUM

SQUARE D OR GE LOAD CENTER OR EQUIVALENT

I I	SLOT#	CKT.	SERVICE	AMPS	BRKR	WIRE	USE	PHS	USE	WIRE	BRKR	AMPS	SERVICE	CKT.	SLOT#
i 1	1	A1	EXISTING CAVERN FEEDER	100	THQ	EX	2H,N,G	1			THQ	20	SPARE (INSTALL BREAKER)	A2	2
1	3		EXISTING CAVERN FEEDER	100	THQ			2			THQ	20	SPARE (INSTALL BREAKER)	A4	4
1	5	A5	EXISTING CAVERN FEEDER	100	THQ	EX	2H,N,G	1			THQ	20	SPARE (INSTALL BREAKER)	A6	6
!	7		EXISTING CAVERN FEEDER	100	THQ			2							8
!	9	A9	NEW CAVERN FEEDER	100	THQ	#2 TEK CABLE	2H,N,G	1							10
1	11		NEW CAVERN FEEDER	100	THQ			2							12
1 1	13	A13	COMMUNICATIONS CABINET EQUIPMENT POWER	20	THQ	#12	H,N,G	1							14
i l	15	A15	COMMUNICATIONS CABINET HEATER HT-2	20	THQ	#12	H,N,G	2							16
i l	17	A17	STRUCTURE RECEPTACLE	20	THQ	#12	H,N,G	1							18
i i	19	A19	SPARE (INSTALL BREAKER)	20	THQ			2							20

NOTES:

1. 2H,N,G MEANS RUN TWO HOT, ONE NEUTRAL AND ONE GROUND CONDUCTOR

2. CONDUCTOR SIZING BASED ON COPPER THINN CONDUCTORS.

3. CONTRACTOR MAY SPLICE ON #2 COPPER TO THE 3/0 CABLE IN ORDER FOR CONDUCTOR TO FIT ON BREAKER A9

### PANEL 'E' (CABINET #4, CAVERN ENTRANCE)

SQUARE D OR GÉ LOAD CENTER OR EQUIVALENT

i	SLOT#	CKT.	SERVICE	AMPS	BRKR	WIRE	USE	PHS	USE	WIRE	BRKR	AMPS	SERVICE	CKT.	SLOT#
1	1	E1	CAVERN FEEDER FROM PANEL 'D'	100	THQ	#2 TEK CABLE	2H,N,G	1	2H,N,G	#2 TEK CABLE	THQ	100	NORMALLY OPEN BRKR FROM EXISTING FDR	E2	2
- 1	3		CAVERN FEEDER FROM PANEL 'D'	100	THQ			2			THQ	100	NORMALLY OPEN BRKR FROM EXISTING FDR		4
!	5	E5	EMERGENCY LIGHT INVERTER	30	THQ	#10 N ENT	H,N,G	1			THQ	20	SPARE (INSTALL BREAKER)	E6	6
!	7	E7	RELAY PANEL CONTROL POWER	20	THQ	#12 N ENT	H,N,G	2			THQ	20	SPARE (INSTALL BREAKER)	E8	8
	9	E9	CABINET RECEPTACLE	20	THQ	#12 N ENT	H,N,G	1			THQ	20	SPARE (INSTALL BREAKER)	E10	10
- :	11	E11	CABINET HEATER HT1	20	THQ	#12 N ENT	H,N,G	2			THQ	20	SPARE (INSTALL BREAKER)	E12	12
- 1	13	E13	EMERGENCY LIGHTING CIRCUIT R2 & R3	20	THQ	12/3 & 10/3 (R3) SOOW	H,N,G	1			THQ	20	SPARE (INSTALL BREAKER)	E14	14
i	15	E15	LIGHTING CIRCUIT R1	20	THQ	12/3 SOOW	H,N,G	2			THQ	20	SPARE (INSTALL BREAKER)	E16	16
- i	17							1			THQ	20	SPARE (INSTALL BREAKER)	E18	18
i	19							2			THQ	20	SPARE (INSTALL BREAKER)	E20	20

MAIN: 200 AMP MAIN LUGS ONLY

BUS: 200 AMPS MINIMUM

- NOTES:
  1. 2H.N.G MEANS RUN TWO HOT, ONE NEUTRALAND ONE GROUND CONDUCTOR
  2. CONDUCTOR SIZING BASED ON COPPER THWN CONDUCTORS.
  3. CONTRACTOR MAY USE ONLY ONE 100 AMP CABLE IN ORDER FOR CONDUCTOR TO FIT ON 100 AMP BREAKER

# **EXISTING PANEL 'B' (CABINET #1, PARADISE ROOM)**

SQUARE D OR GE LOAD CENTER OR FOUIVALENT

MAIN: 200 AMP MAIN LUGS ONLY BUS: 200 AMPS MINIMUM

SLOT#	CKT	SERV CE	AMPS	BRKR	WIRE	USE	PHS	USE	WIRE	BRKR	AMPS	SERV CE	CKT.	SLOT#
1	B1	CAVERN FEEDER FROM PANEL 'A'	100	THQ	#2 TEK CABLE	2H,N,G	1	2H,N,G	#2 TEK CABLE	THQ	100	CAVERN FEEDER GOING TO PANEL 'C'	B2	2
3		CAVERN FEEDER FROM PANEL 'A'	100	THQ			2			THQ	100	CAVERN FEEDER GOING TO PANEL 'C'		4
5	B5	EMERGENCY LIGHT INVERTER	30	THQ	#10 N ENT	H,N,G	1			THQ	20	SPARE (INSTALL BREAKER)	B6	6
7	B7	RELAY PANEL CONTROL POWER	20	THQ	#12 N ENT	H,N,G	2			THQ	20	SPARE (INSTALL BREAKER)	B8	8
9	B9	CABINET RECEPTACLE	20	THQ	#12 N ENT	H,N,G	1			THQ	20	SPARE (INSTALL BREAKER)	B10	10
11	B11	CABINET HEATER HT1	20	THQ	#12 N ENT	H,N,G	2			THQ	20	SPARE (INSTALL BREAKER)	B12	12
13	B13	EMERGENCY LIGHTING CIRCUIT R1, R3, R5, R7, R9	20	THQ	12/3 & 10/3 (R7) SOOW	H,N,G	1			THQ	20	SPARE (INSTALL BREAKER)	B14	14
15	B15	LIGHTING CIRCUIT R2, R4	20	THQ	12/3 SOOW	H,N,G	2			THQ	20	SPARE (INSTALL BREAKER)	B16	16
17	B17	LIGHTING CIRCUIT R6	20	THQ	12/3 SOOW	H,N,G	1		·	THQ	20	SPARE (INSTALL BREAKER)	B18	18
19	B19	LIGHTING CIRCUIT R8	20	THO	10/3 SOOW	HNG	2			THO	20	SPARE (INSTALL BREAKER)	B20	20

- NOTES:

  1. 2H,N,G MEANS RUN TWO HOT, ONE NEUTRAL AND ONE GROUND CONDUCTOR

  2. CONDUCTOR SIZING BASED ON COPPER THWN CONDUCTORS.

  3. CONTRACTOR MAY USE ONLY ONE 100 AMP CABLE IN ORDER FOR CONDUCTOR TO FIT ON 100 AMP BREAKER

CIRCUIT B2 IS NEW WORK IN PHASE 2. SEE SHEET E7.0

INSTALLED IN PHASE 1 OF THE PROJECT

# PANEL 'C' (CABINET #2, PIT BOTTOM)

MAIN: 200 AMP MAIN LUGS ONLY

MAIN: 200 AMP MAIN LUGS ONLY 200 AMPS MINIMUM

SLOT#	CKT.	SERVICE	AMPS	BRKR	WIRE	USE	PHS	USE	WIRE	BRKR	AMPS	SERVICE	CKT.	SLOT#
1	C1	CAVERN FEEDER FROM PANEL 'B'	100	THQ	#2 TEK CABLE	2H,N,G	1	2H,N,G	#2 TEK CABLE	THQ	100	CAVERN FEEDER GOING TO PANEL 'D'	C2	2
3		CAVERN FEEDER FROM PANEL 'B'	100	THQ			2			THQ	100	CAVERN FEEDER GOING TO PANEL 'D'		4
5	C5	EMERGENCY LIGHT INVERTER	30	THQ	#10 N ENT	H,N,G	1			THQ	20	SPARE (INSTALL BREAKER)	C6	6
7	C7	RELAY PANEL CONTROL POWER	20	THQ	#12 N ENT	H,N,G	2			THQ	20	SPARE (INSTALL BREAKER)	C8	8
9	C9	CABINET RECEPTACLE	20	THQ	#12 N ENT	H,N,G	1			THQ	20	SPARE (INSTALL BREAKER)	C10	10
11	C11	CABINET HEATER HT1	20	THQ	#12 N ENT	H,N,G	2			THQ	20	SPARE (INSTALL BREAKER)	C12	12
13	C13	EMERGENCY LIGHTING CIRCUIT R2 & R4	20	THQ	12/3 & 10/3 (R4) SOOW	H,N,G	1			THQ	20	SPARE (INSTALL BREAKER)	C14	14
15	C15	LIGHTING CIRCUIT R1	20	THQ	12/3 SOOW	H,N,G	2			THQ	20	SPARE (INSTALL BREAKER)	C16	16
17	C17	LIGHTING CIRCUIT R3	20	THQ	10/3 SOOW	H,N,G	1			THQ	20	SPARE (INSTALL BREAKER)	C18	18
10	C19	LICHTING CIDCUIT DE	20	THO	12/2 COOM	HMC	2			THO	20	CDADE (INCTALL DDEAVED)	C20	20

NOTES:

1. 2H,N,G MEANS RUN TWO HOT, ONE NEUTRALAND ONE GROUND CONDUCTOR

2. CONDUCTOR SIZING BASED ON COPPER THWN CONDUCTORS.

3. CONTRACTOR MAY USE ONLY ONE 100 AMP CABLE IN ORDER FOR CONDUCTOR TO FIT ON 100 AMP BREAKER

# PANEL 'D' (CABINET #3, CATHEDRAL ROOM)

NOTES:

1. 2H.N.G MEANS RUN TWO HOT, ONE NEUTRALAND ONE GROUND CONDUCTOR

2. CONDUCTOR SIZING BASED ON COPPER THWN CONDUCTORS.

3. CONTRACTOR MAY USE ONLY ONE 100 AMP CABLE IN ORDER FOR CONDUCTOR TO FIT ON 100 AMP BREAKER

# SWITCHING SCHEDULE

SHEET # CONTROLLED RELAY

CAVE ENTRANCE	SHEET #	CONTROLLED RELAY	ACTION	DESCRIPTION
CAVE ENTINATOE				
SW1-CAB4	E1.0	R1-CAB4	TURN ON	AHEAD LIGHTING TURNED ON
3WI-CAD4	L1.0	R2-CAB4	TURN ON	AHEAD LIGHTING TURNED ON
		R5-CAB2	TURN ON	TURN ON FIXTURE 'B' BOTTOM OF PIT
		NO-OND2	TORIVOIV	TORKY ON THATORE B BOTTOW OF TH
SW2-CAB4	E2.0	R1-CAB4	TURN OFF	BEHIND LIGHTING TURNED OFF
		R2-CAB4	TURN OFF	BEHIND LIGHTING TURNED OFF
SW3-CAB4	E2.0	R3-CAB4	TURN ON	AHEAD LIGHTING TURNED ON
		R3-CAB3	TURN ON	AHEAD LIGHTING TURNED ON
		R4-CAB3	TURN ON	AHEAD LIGHTING TURNED ON
SW1-CAB3	E2.0	R1-CAB3	TURN ON	CATHEDRAL ROOM TURNED ON
		R2-CAB3	TURN ON	CATHEDRAL ROOM TURNED ON
		R3-CAB3	TURN ON	CATHEDRAL ROOM TURNED ON
		R4-CAB3	TURN ON	CATHEDRAL ROOM TURNED ON
		R5-CAB3	TURN ON	CATHEDRAL ROOM TURNED ON
0140 0400	50.0	D4 04B0	TUDA OFF	DELIND (OATHEDDAL DOOM) TUDNED OFF
SW2-CAB3	E2.0	R1-CAB3	TURN OFF	BEHIND (CATHEDRAL ROOM) TURNED OFF
		R2-CAB3	TURN OFF	BEHIND (CATHEDRAL ROOM) TURNED OFF
		R3-CAB3	TURN OFF	BEHIND (CATHEDRAL ROOM) TURNED OFF
		R4-CAB3	TURN OFF	BEHIND (CATHEDRAL ROOM) TURNED OFF
SW3-CAB3	E2.0	R3-CAB4	TURN OFF	BEHIND LIGHTING TURNED OFF
SWS-CADS	LZ.U	NJ=UAD4	TORN OFF	DETINO EIGHTING TORNED OFF
SW1-CAB2	E2.0	R1-CAB2	TURN ON	AHEAD LIGHTS TURNED ON
		R2-CAB2	TURN ON	AHEAD LIGHTS TURNED ON
		R5-CAB3	TURN ON	AHEAD LIGHTS TURNED ON
		0/100		
SW2-CAB2	E3.0	R2-CAB2	TURN OFF	BEHIND LIGHTS TURNED OFF
		R5-CAB3	TURN OFF	BEHIND LIGHTS TURNED OFF
SW3-CAB2	E3.0	R1-CAB2	TURNS ON	AHEAD LIGHTING TURNED ON
		R3-CAB2	TURNS ON	AHEAD LIGHTING TURNED ON
		R4-CAB2	TURNS ON	AHEAD LIGHTING TURNED ON
SW4-CAB2	E5.0	R1-CAB2	TURNS OFF	BEHIND LIGHTING TURNED OFF
		R3-CAB2	TURNS OFF	BEHIND LIGHTING TURNED OFF
		R4-CAB2	TURNS OFF	BEHIND LIGHTING TURNED OFF
SW12-CAB1	E5.0	R7-CAB1	TURNS ON	AHEAD LIGHTING TURNED ON
		R8-CAB1	TURNS ON	AHEAD LIGHTING TURNED ON
SW11-CAB1	E6.0	R7-CAB1	TURNS OFF/ON	FOOT SWITCH
JWIII-OADI	20.0	R8-CAB1	TURNS OFF/ON	FOOT SWITCH
		NO-CAD1	101113 0117 011	1001 SWITCH
SW10-CAB1	E6.0	R7-CAB1	TURNS OFF	BEHIND LIGHTING TURNED OFF
		R8-CAB1	TURNS OFF	BEHIND LIGHTING TURNED OFF
SW9-CAB1	E6.0	R3-CAB1	TURNS ON/OFF	PARADISE ROOM RAILING LIGHTING ON
		R5-CAB1	TURNS ON/OFF	AHEAD LIGHTING TURNED ON
		R6-CAB1	TURNS ON/OFF	AHEAD LIGHTING TURNED ON
SW4-CAB1	E7.0	R9-CAB1	TURNS ON/OFF	LIGHTED RAILING FOR STAIR 49
SW8-CAB1	E7.0	R9-CAB1	TURNS ON/OFF	LIGHTED RAILING FOR STAIR 49
J. J. OADT	L7.0	IV-OAD I	. 31043 0147 011	EGITED TO ILLINO FOR STAIR TY
	E7.0	R2-CAB1	TURNS ON/OFF	PARADISE ROOM PERIMETER LIGHTING
SW7-CAB1				
SW7-CAB1				
SW7-CAB1				REST OF PARADISE ROOM LIGHTING TURNED ON
	E7.0	R4-CAB1	TURNS ON/OFF	
SW6-CAB1				
SW6-CAB1	E7.0 E7.0	R5-CAB1	TURNS OFF	BEHIND LIGHTING TURNED OFF
SW6-CAB1				
SW6-CAB1 SW5-CAB1	E7.0	R5-CAB1 R6-CAB1	TURNS OFF TURNS OFF	BEHIND LIGHTING TURNED OFF BEHIND LIGHTING TURNED OFF
SW6-CAB1 SW5-CAB1		R5-CAB1	TURNS OFF	BEHIND LIGHTING TURNED OFF
SW6-CAB1 SW5-CAB1 SW3-CAB1	E7.0	R5-CAB1 R6-CAB1 R1-CAB1	TURNS OFF TURNS OFF TURNS ON/OFF	BEHIND LIGHTING TURNED OFF BEHIND LIGHTING TURNED OFF EXIT TUNNEL AND AIR LOCK OCCUPANCY LIGHTS TURNED ON
SW6-CAB1 SW5-CAB1	E7.0	R5-CAB1 R6-CAB1 R1-CAB1 R4-CAB1	TURNS OFF TURNS OFF TURNS ON/OFF TURNS ON/OFF	BEHIND LIGHTING TURNED OFF BEHIND LIGHTING TURNED OFF EXIT TUNNEL AND AIR LOCK OCCUPANCY LIGHTS TURNED ON PARADISE ROOM LIGHTING TURNED OFF
SW6-CAB1 SW5-CAB1 SW3-CAB1	E7.0	R5-CAB1 R6-CAB1 R1-CAB1 R4-CAB1 R2-CAB1	TURNS OFF TURNS ON/OFF TURNS ON/OFF TURNS ON/OFF TURNS ON/OFF	BEHIND LIGHTING TURNED OFF BEHIND LIGHTING TURNED OFF EXIT TUNNEL AND AIR LOCK OCCUPANCY LIGHTS TURNED ON PARADISE ROOM LIGHTING TURNED OFF PARADISE ROOM LIGHTING TURNED OFF
SW6-CAB1 SW5-CAB1 SW3-CAB1	E7.0	R5-CAB1 R6-CAB1 R1-CAB1 R4-CAB1	TURNS OFF TURNS OFF TURNS ON/OFF TURNS ON/OFF	BEHIND LIGHTING TURNED OFF BEHIND LIGHTING TURNED OFF EXIT TUNNEL AND AIR LOCK OCCUPANCY LIGHTS TURNED ON PARADISE ROOM LIGHTING TURNED OFF
SW6-CAB1 SW5-CAB1 SW3-CAB1 SW2-CAB1	E7.0 E7.0 E8.0	R5-CAB1 R6-CAB1 R1-CAB1 R4-CAB1 R2-CAB1 R3-CAB1	TURNS OFF TURNS ON/OFF TURNS ON/OFF TURNS ON/OFF TURNS ON/OFF	BEHIND LIGHTING TURNED OFF BEHIND LIGHTING TURNED OFF EXIT TUNNEL AND AIR LOCK OCCUPANCY LIGHTS TURNED ON PARADISE ROOM LIGHTING TURNED OFF PARADISE ROOM LIGHTING TURNED OFF PARADISE ROOM RAILING LIGHTING OFF
SW6-CAB1 SW5-CAB1 SW3-CAB1 SW2-CAB1	E7.0	R5-CAB1 R6-CAB1 R1-CAB1 R4-CAB1 R2-CAB1	TURNS OFF TURNS ON/OFF TURNS ON/OFF TURNS ON/OFF TURNS ON/OFF	BEHIND LIGHTING TURNED OFF BEHIND LIGHTING TURNED OFF EXIT TUNNEL AND AIR LOCK OCCUPANCY LIGHTS TURNED ON PARADISE ROOM LIGHTING TURNED OFF PARADISE ROOM LIGHTING TURNED OFF
SW6-CAB1 SW5-CAB1 SW3-CAB1	E7.0 E7.0 E8.0	R5-CAB1 R6-CAB1 R1-CAB1 R4-CAB1 R2-CAB1 R3-CAB1	TURNS OFF TURNS ON/OFF TURNS ON/OFF TURNS ON/OFF TURNS ON/OFF	BEHIND LIGHTING TURNED OFF BEHIND LIGHTING TURNED OFF EXIT TUNNEL AND AIR LOCK OCCUPANCY LIGHTS TURNED ON PARADISE ROOM LIGHTING TURNED OFF PARADISE ROOM LIGHTING TURNED OFF PARADISE ROOM RAILING LIGHTING OFF

NOTE: AHEAD MEANS LIGHTS AHEAD WITH RESPECT TO THE DIRECTION OF TRAVEL BY A TOUR GROUP. CONVERSELY, BEHIND MEANS THE LIGHTS BEHIND WITH RESPECT TO THE DIRECTION OF A TOUR GROUP.

Lewis & Clark Caverns State Park
Railing and Lighting Upgrades 2018
Montang Fish, FWP #7176603

Railing and Lighti







	drawn MKE	check by MTF
·		
	issue	log
	For bidding	03/23/1

E 10.1